

Cyclone Pulley Cover Made in the USA!

INSTRUCTIONS:

(Please read entire sheet before beginning install)

Parts included:

1 Pulley Cover 1 Large Spacer 2 Small Spacers 1 ³/₈-16 x 2.5" S/S SHCS Bolt with washer 2 ¹/₄-20 x 2.25" S/S SHCS Bolt with washer

Installation Steps:

- 1. Remove your stock pulley cover.
 - 1a. There are three bolts holding the stock cover in place. The larger bolt may be securing your exhaust in place. If so, once the bolt is removed, you may need to pivot or move the exhaust L bracket out of the way in order to remove the stock cover.
- 2. Reference picture below for orientation of cover on bike.


3. Place one of the new ¼" bolts through new pulley cover in the top right position nearest motor, with washer installed between the bolt and the outside of the pulley cover. Now place one of the smaller spacers over the bolt, then align pulley cover in place on the side of the bike and start the bolt into threads. Do not tighten all the way at this time.

4. Now install the remaining bolts in the same fashion as above. If your exhaust used one of these bolts you will need to reattach it at this time.

5. Now tighten the $\frac{3}{8}$ " bolt to torque spec of 30-33 ft-lbs. Then tighten the two $\frac{1}{4}$ " bolts to torque spec of 7-10 ft-lbs.

General Notes:

- The riders safety depends on the correct installation of this kit. Please do not attempt if you have any doubts of your ability to install.
- We recommend blue (medium) threadlocker be used on all threads.
- Torque Values: ³/₈" bolt 30-33 ft-lbs. ¹/₄" bolts 7-10 ft-lbs.
- This pulley cover does not provide the protection from the pulley that the stock cover provides. Shoe laces, Pant legs, Fingers, Rocks, ect. may more easily get between the belt and the pulley.
- We are NOT responsible for any damage done to you or your bike as a result of the installation of this cover.
- After double checking everything - Have fun! Go for a ride!!!

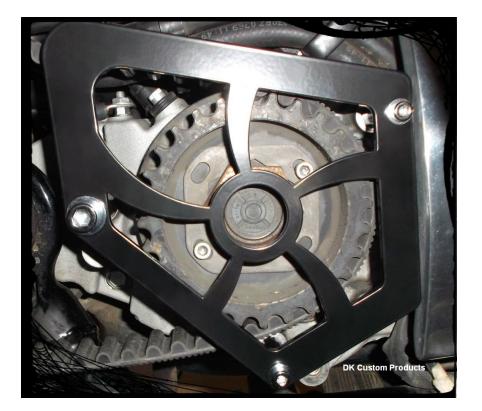

www.DKCustomProducts.com