



# *Stealth LED Driving Lights*

## **Parts included:**

- 1- Pair of Stealth LED Driving Lights
- 4- Posi Tap Connectors
- 2- Sections of Extension Wires w/ Shrink Tube
- 2- Additional Fasteners

## **INSTRUCTIONS**

(Please read all instructions before beginning install, including the Wiring Supplement)

1. Install your Stealth LED Driving lights in your chosen location. This can be done with our optional clamp style mounting brackets.
2. The driving lights each have two wires coming from them. The black wire is for the ground. The red wire is for 12 volt positive.
3. Depending on where you have mounted your driving lights you may want to use the included Extension Wires w/ Shrink Tube. You may choose your preferred method to connect the extension to the Driving Light Wires. (Solder, Spade, Bullet, etc.)
4. There are many different ways to provide 12 volt positive power to the driving lights. You may choose to wire them to your low beam, running lights, toggle switch, or your stock driving lights on some models.
5. Once you have determined where you want to tie into your factory wiring you may do this with the supplied Posi Tap Connectors.

## **Important Notes:**

- If you are using engine guard clamps to mount the driving lights, you may need to use the additional fasteners.
- The rider's safety depends on the correct installation of this headlight assembly. Please do not attempt if you have any doubts of your ability to install.
- When wiring these driving lights to your bike, make sure to make good connections and to carefully route & insulate to avoid grounding out.
- **We STRONGLY recommend using blue (medium) thread locker on all threads.**
- This bulb is very bright, you may need to adjust the angle of your driving lights for oncoming traffic. Do not look directly at it from close range.
- These are NOT DOT Approved. Recommended for Off-Road Use Only


# Posi-Tap™

TAP CONNECTOR



- TAPS WIRES WITHOUT CUTTING
- TOTAL WIRE INTEGRITY IS MAINTAINED
- INSTALLS IN SECONDS BY HAND
- NO CRIMPING OR TOOLS REQUIRED
- RELIABLE OR PERMANENT
- LESS RESISTANCE
- VIBRATION PROOF
- FULLY INSULATED

**POWERS UP TO (4) LEADS  
AT ONCE!**

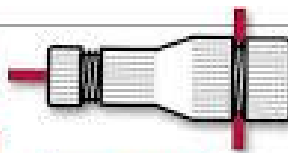

## QUICK & EASY

- 1**   
Insert Hot Wire
- 2**   
Tighten
- 3**   
Strip Leads
- 4**   
Insert & Tighten



**NO CRIMPING**



**NO TOOLS NEEDED**